

Monica Hakala

Using Eno Board Pen

1. Turn on Eno board and projector.
2. Screen will automatically come up on computer.
3. Touch top icon of screen to activate the screen.
4. Then touch second icon to be able to write on board.
5. If you desire to go back to home screen, always touch top icon.
6. If you make a mistake and care to erase, press circle with eraser icon on board
7. If you desire to erase entire board, press X with eraser.
8. When finished teaching, turn off Eno projector.